




DS150 - MANITEX
For Truck Mounted Cranes

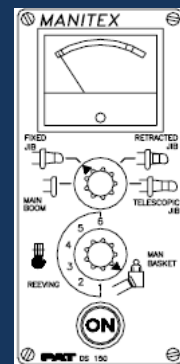

Service Manual

NOTICE

SkyAzúl makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and/or its fitness for a particular purpose.

SkyAzúl will not be liable for errors contained in this manual or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual. This document contains proprietary information, which is protected by copyright, and all rights are reserved.

No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of SkyAzúl.

SkyAzúl reserves proprietary rights to all drawings, photos and the data contained therein. The drawings, photos and data are confidential and cannot be used or reproduced without the written consent of SkyAzúl. The drawings and/or photos are subject to technical modification without prior notice.

All information in this document is subject to change without notice.



SkyAzúl, Inc.
16 Walnut Street
Middletown, MD 21769
Fax 301-371-0029
info@skyazul.com

SYSTEM DESCRIPTION

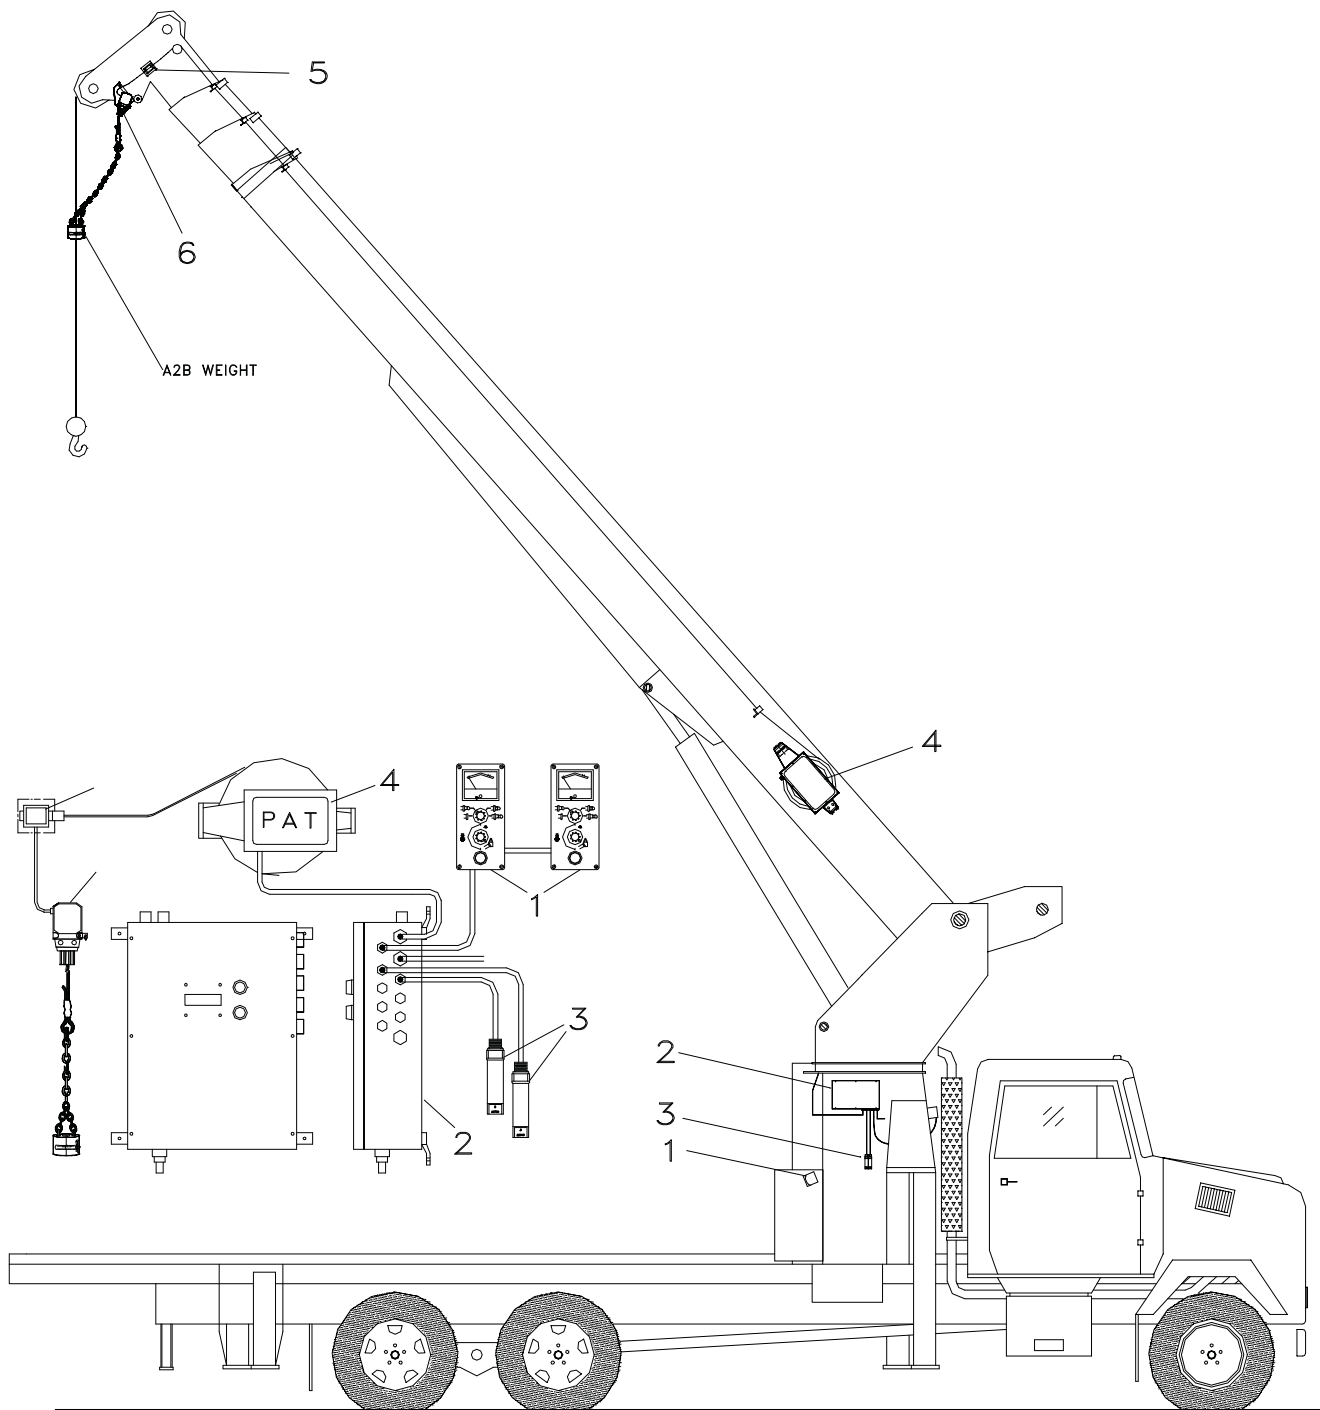


Fig. 1: Components of the LMI System PAT DS 150

1. Operator's Console
2. Central Unit
3. Pressure Transducer
4. Cable Reel
5. Boom Tip Junction Box
6. A2B Switch

TROUBLESHOOTING

The service console displays 16 variables to assist the setup and diagnostics of this system. The first numeral displayed is the reference number 1 thru 16.

The second value displayed is as follows:

REF #	VALUE
1	Main Boom Length
2	Main Boom Angle
3	Radius
4	Jib Angle (with jib only, otherwise blank)
5	Tip Height
6	Operating Mode
7	Error Code (in case of error only, otherwise blank)
8	Real Moment
9	Jib Length (with jibs only, otherwise blank)
10	Rated Load (in t or 1,000 lbs)
11	Actual Load (in t or 1,000 lbs)
12	Reeving
13	Load Moment in %
14	Piston side Pressure in mV
15	Rod side Pressure in mV
16	Test






By depressing either the page up or page down" button, the display will sequence through the variables.

In case of a malfunction of the system, both the OVL and A2B lights will illuminate simultaneously. By selecting variable #7 on the service console, the display will indicate a code, which identifies the system malfunction.

The error codes listed in the Malfunction Table will identify various faults, which can occur with the LMI. Following the Malfunction Table is information, which explains each fault and describes the action, which should be taken to correct the fault.

Error codes 7 through 99 are faults within the electronic microprocessor and must be repaired by factory-trained service personnel. When these faults occur, SkyAzul service must be contacted.

DS150 CENTRAL UNIT

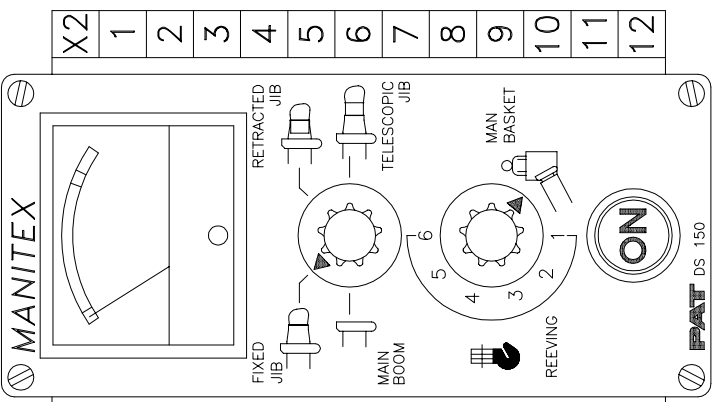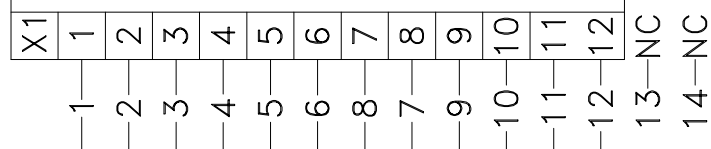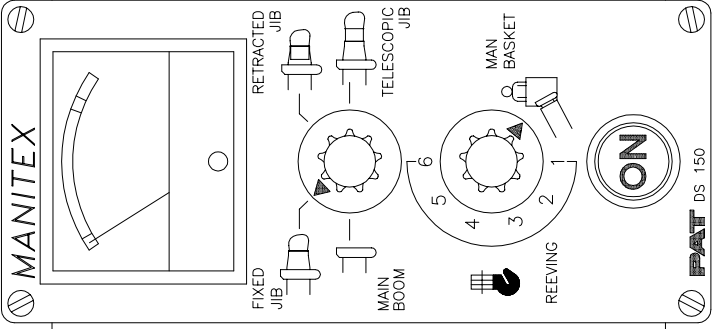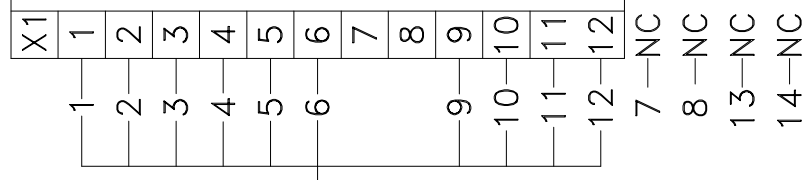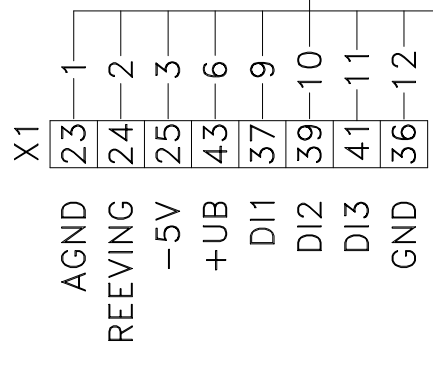


050-000-060-045
 14-NC

031-300-100-842

74" OF 14 X 0.5 CABLE HARDWIRED TO 031-300-100-842 CONSOLE,
 PLUG OTHER HOLE IN BACK OF CONSOLE. MANITEX WIRES OTHER
 CONSOLE 050-000-060-045 AND CENTRAL UNIT 024-150-060-002.

PAT		PAT AMERICA, Inc. 1665 ORCHARD DRIVE CHAMBERSBURG, PA 17201		DS150 MANITOWOC WIRING WITH LEFT AND RIGHT CONSOLES	
REV	ECN	DESCRIPTION	GENERAL TOLERANCES X.XX = 0.01 X.XXX = 0.005	P/N	031-300-101-283
			BY	APPROVED	12/07/99
			DATE	CHRIS HERTZLER	CHRIS HERTZLER
				SCALE: NONE	SHEET: 2 OF 2
				SIZE: DWG NO.	
				A 031 300 10 1283	
				100-001	
				C.A.G.E. 79760	

PAT America Inc. reserves proprietary rights to this drawing and to the data shown thereon. The user of this drawing is authorized to reproduce it for personal use only. Any other use without the consent of PAT America Inc. is prohibited. This drawing is subject to technical modification without prior notice.

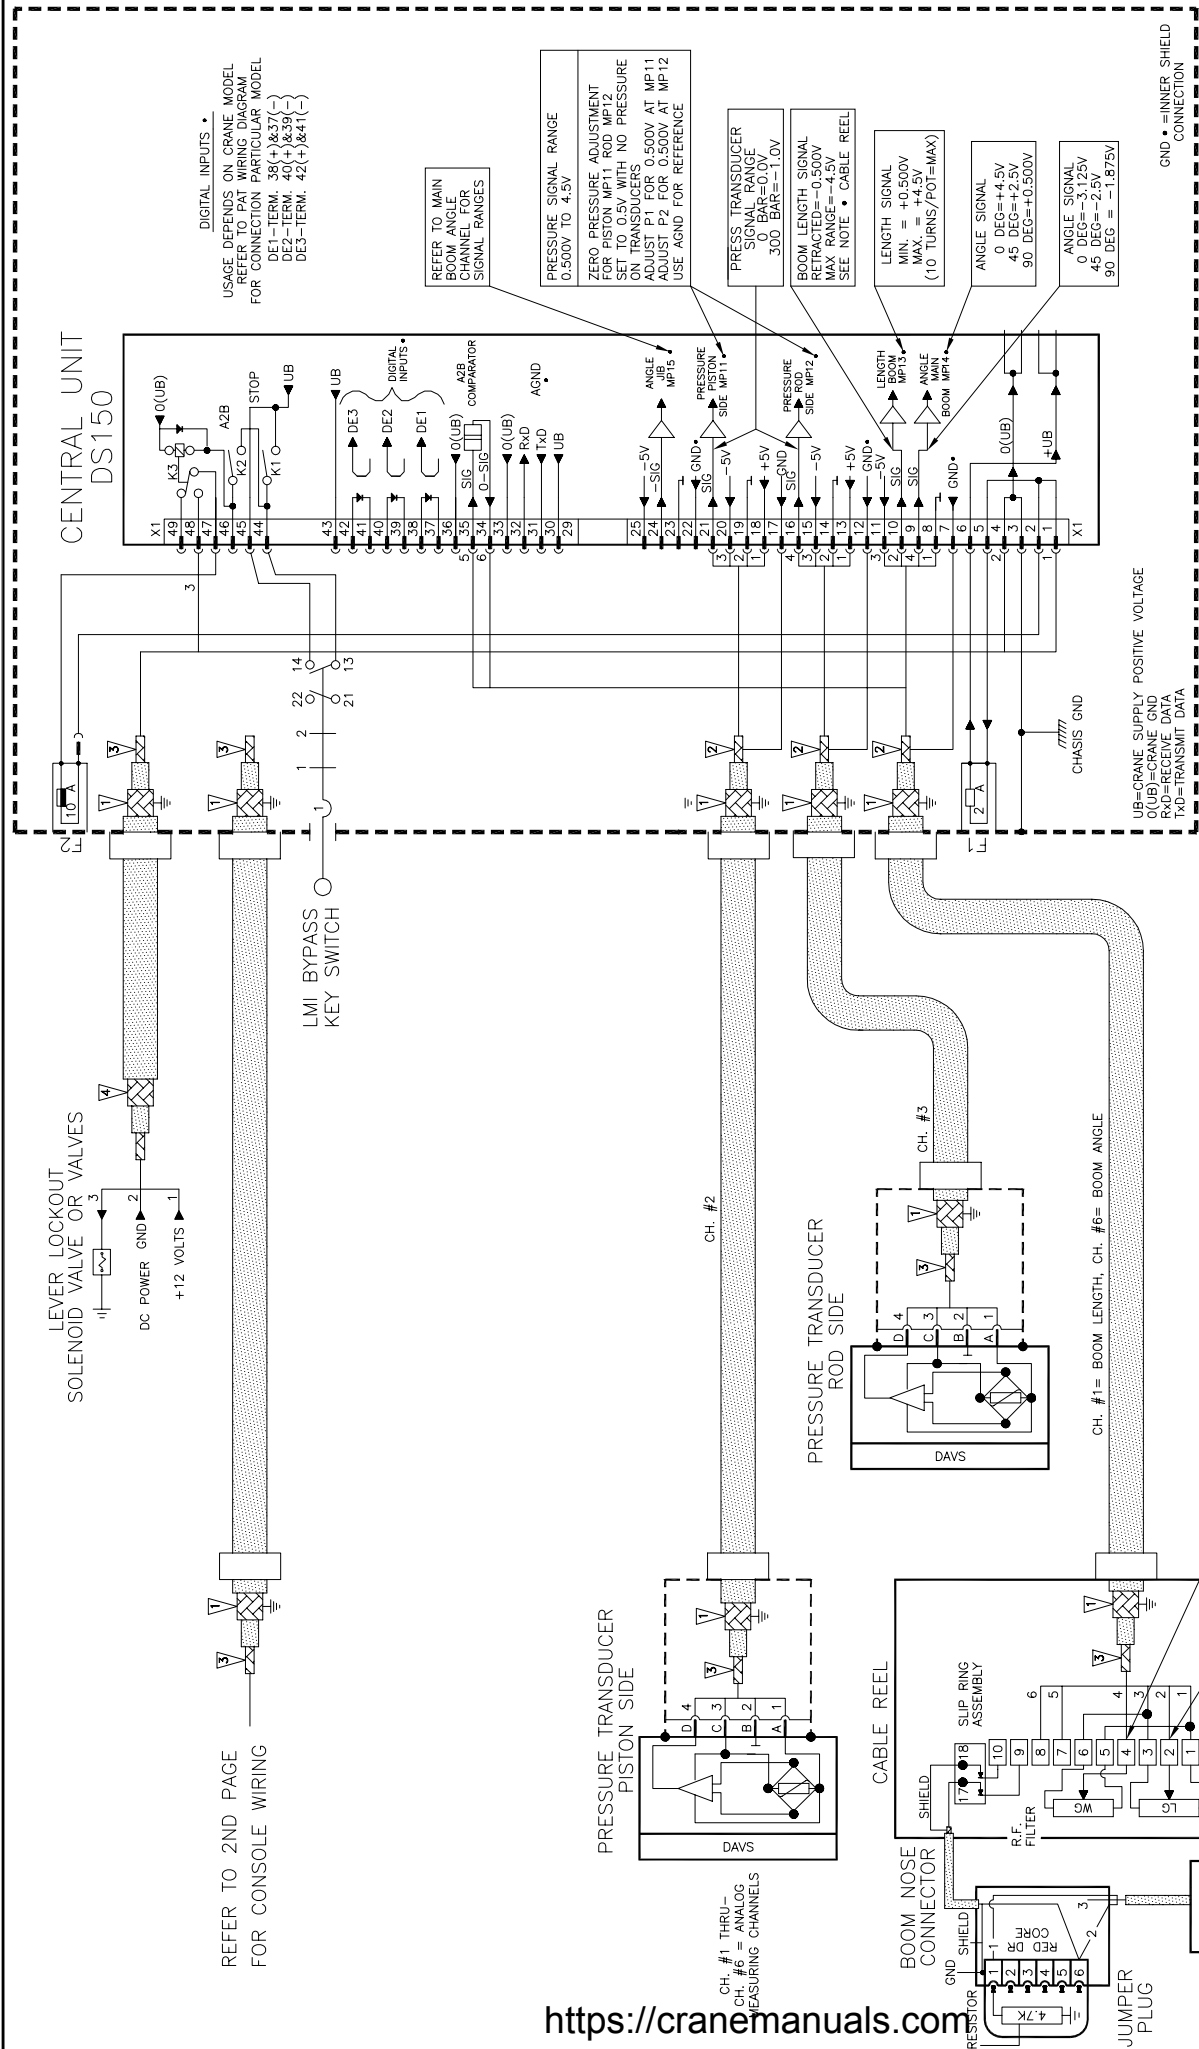

DIGITAL INPUTS •
 USAGE DEPENDS ON CRANE MODEL
 REFER TO PAT WIRING DIAGRAM
 FOR CONNECTION PARTICULAR MODEL
 DE1-TERM. 38(+)&37(-)
 DE2-TERM. 40(+)&39(-)
 DE3-TERM. 42(+)&41(-)

REFER TO MAIN
 BOOM ANGLE
 CHANNEL FOR
 SIGNAL RANGES

PRESSURE SIGNAL RANGE
 0.500V TO 4.5V
 ZERO PRESSURE ADJUSTMENT
 FOR PISTON MP11 ROD MP12
 SET TO 0.5V WITH NO PRESSURE
 ON TRANSDUCERS
 ADJUST P1 FOR 0.500V AT MP11
 ADJUST P2 FOR 0.500V AT MP12
 USE AGND FOR REFERENCE

PRESS TRANSDUCER
 SIGNAL RANGE
 0 BAR=0.0V
 300 BAR=-1.0V
 BOOM LENGTH SIGNAL
 RETRACTED=-0.500V
 MAX RANGE=-4.5V
 SEE NOTE • CABLE REEL

LENGTH SIGNAL
 0 DEG = +0.500V
 MAX = +4.500V
 90 DEGS/POT=(MAX)
 (10 TURNS/POT=MAX)

ANGLE SIGNAL
 0 DEG=+0.500V
 45 DEG=+2.500V
 90 DEG=+0.500V

ANGLE SIGNAL
 0 DEG=-3.125V
 45 DEG=-2.500V
 90 DEG=-1.875V

GND • =INNER SHIELD
 CONNECTION

UB=CRANE SUPPLY POSITIVE VOLTAGE
 0(UB)=CRANE GND
 RXD=RECEIVE DATA
 TXD=TRANSMIT DATA



- 1 OUTER SHIELD GROUNDED AT STRAIN RELIEF CONNECTOR
- 2 INSULATED WIRE SOLDERED TO INNER SHIELD AND CONNECTED AS SHOWN
- 3 INNER SHIELD CUT OFF AND TAPED
- 4 OUTER SHIELD CUT OFF AND TAPED

NOTE:
 MAX. LENGTH SIGNAL
 VARIES WITH BOOM
 MAX. VOLTAGE -4.5V IS
 FOR 10 TURNS ON POT.


PAT AMERICA, Inc. 1665 ORCHARD DRIVE CHAMBERSBURG, PA 17201		DS150 MANITOWOC WIRING WITH LEFT AND RIGHT CONSOLES	
GENERAL TOLERANCES	X.XX = 0.01	P/N	031-300-101-283
BY	APV	DATE	12/07/99
APPROVED	CHRIS HERTZLER	DRAWN	CHRIS HERTZLER
SCALE:	NONE	SHEET:	1 OF 2
SIZE	DWG NO.		
	00-001		
C.A.G.E.	79760		
		A 031 300 10 1283	

PAT America Inc. reserves proprietary rights to this drawing and to the data shown thereon. The consent of PAT America Inc. This drawing is subject to technical modification without prior notice.

ITEM	PART NUMBER	QTY
DESCRIPTION		
1	046-23-040-003	1
CABLE REL. LNO 231, STANDARD		
2	031-202-100-286	1
CABLE ASSY, 7 COND. O.S., 7		
PIN (MANTIX # 480570-501)		
3	030-214-281-107	1
STRAIN RELIEF ACCT., PG 11-7		
REDUCER		
4	021-441-070-407	3
STRAIN RELIEF, PG 7, 4-6mm		
5	003-101-013-001	1
CONNECTOR ALLOY, HOUSING, #18-PS 11 (MPTA.)		
6	010-303-200-200	1
HARDWARE, 8-RING CONNECTOR HOUSING (3002mm)		
7	020-211-010-303	1
HARDWARE, SET SCREW, 3.5mm		
CONNECTOR HOUSING		
8	021-202-100-023	1
CONNECTOR-CANNON 7 PIN 18-15 PLUG, FEMALE CASTORBE-03-15-F		

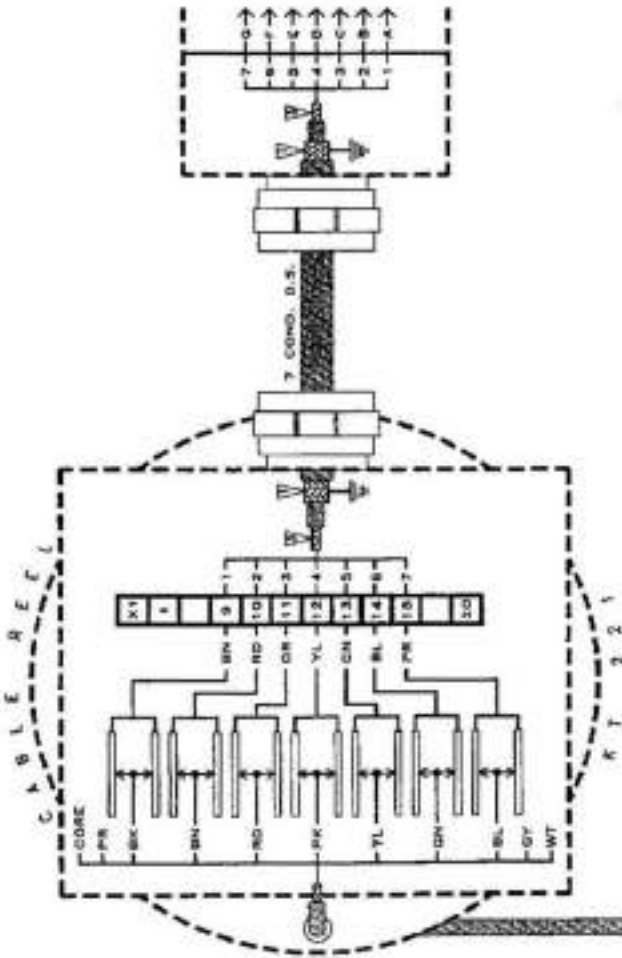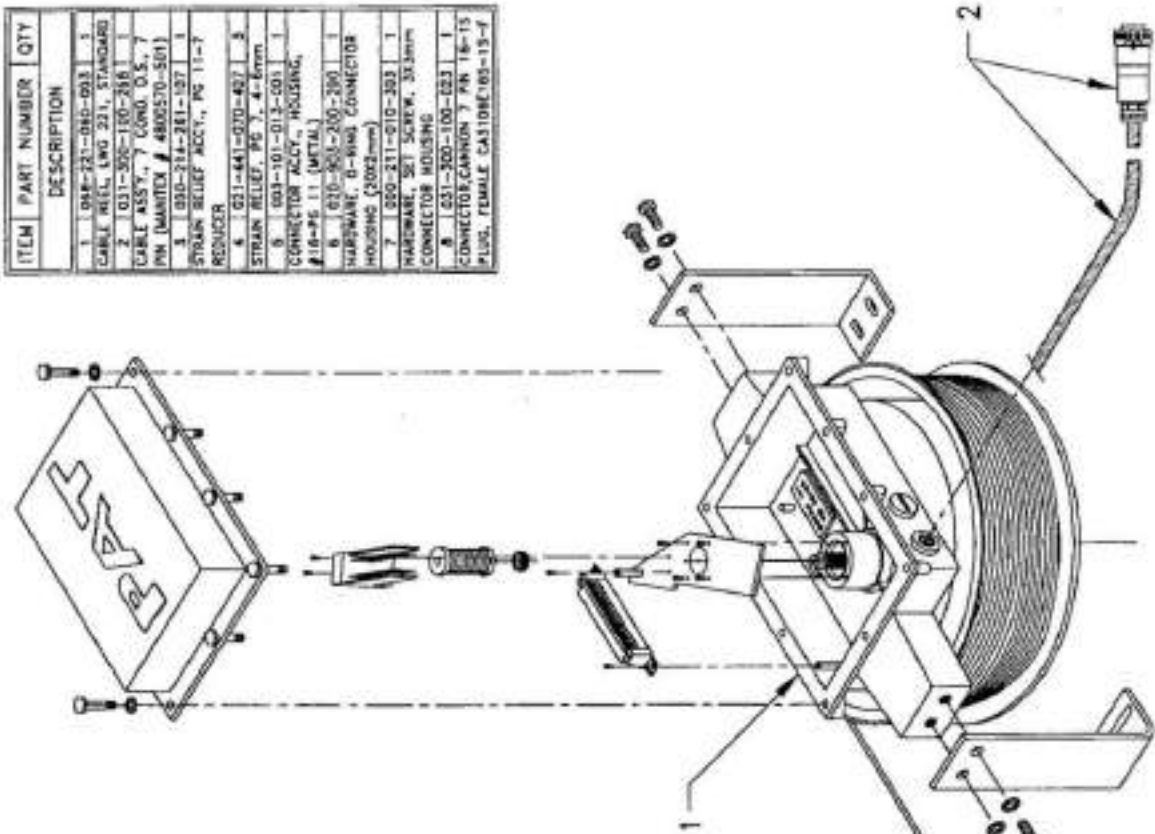


ELECTRICAL DIAGRAM

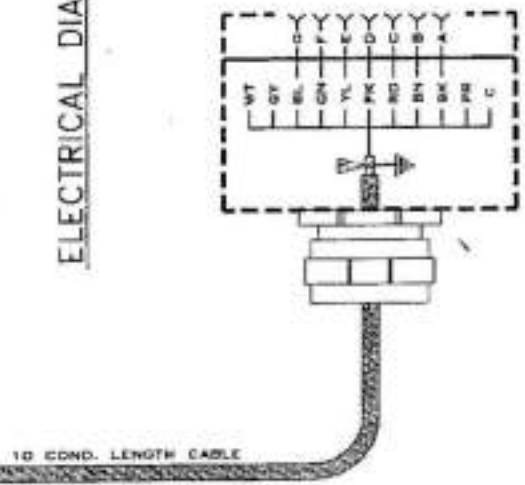


- NOTES: ELECTRICAL**
- 1. OUTER SHIELD GROUNDED AT STRAIN RELIEF CONNECTOR.
 - 2. INNER SHIELD CUT OFF AND TAPED.
 - 3. SHIELD SHIELD GROUNDED AT STRAIN RELIEF CONNECTOR.

ITEM	PART NUMBER	DESCRIPTION	QTY
1	024-150-100-006	INDICATOR, DISPLAY, LCD	1
2	031-300-100-212	WIRING ACCY, ADHESIVE TIE WRAP HOLDR	2
3	031-300-100-184	ALARM ACCY, GASKET, BUZZER (MANITEX)	1
4	031-300-100-262	LENS, CENTRAL UNIT COVER FOR DISPLAY	1
5	031-300-100-183	ALARM, PIEZO RED ADJUSTABLE	1
6	031-300-100-261	WIRING ACCY, CENTRAL UNIT (SIMON-RO, MANITEX)	1
7	123-429-901-810	WIRE, HOOKUP 24 AWG BLACK	1
8	123-429-907-110	CABLE, TELEPHONE 4-WIRE	1
9	024-150-110-002	COVER, DS 150 CENTRAL UNIT	1
10	031-300-100-185	SWITCH, PUSHBUTTON, SIMON-RO, MANITEX LID	2

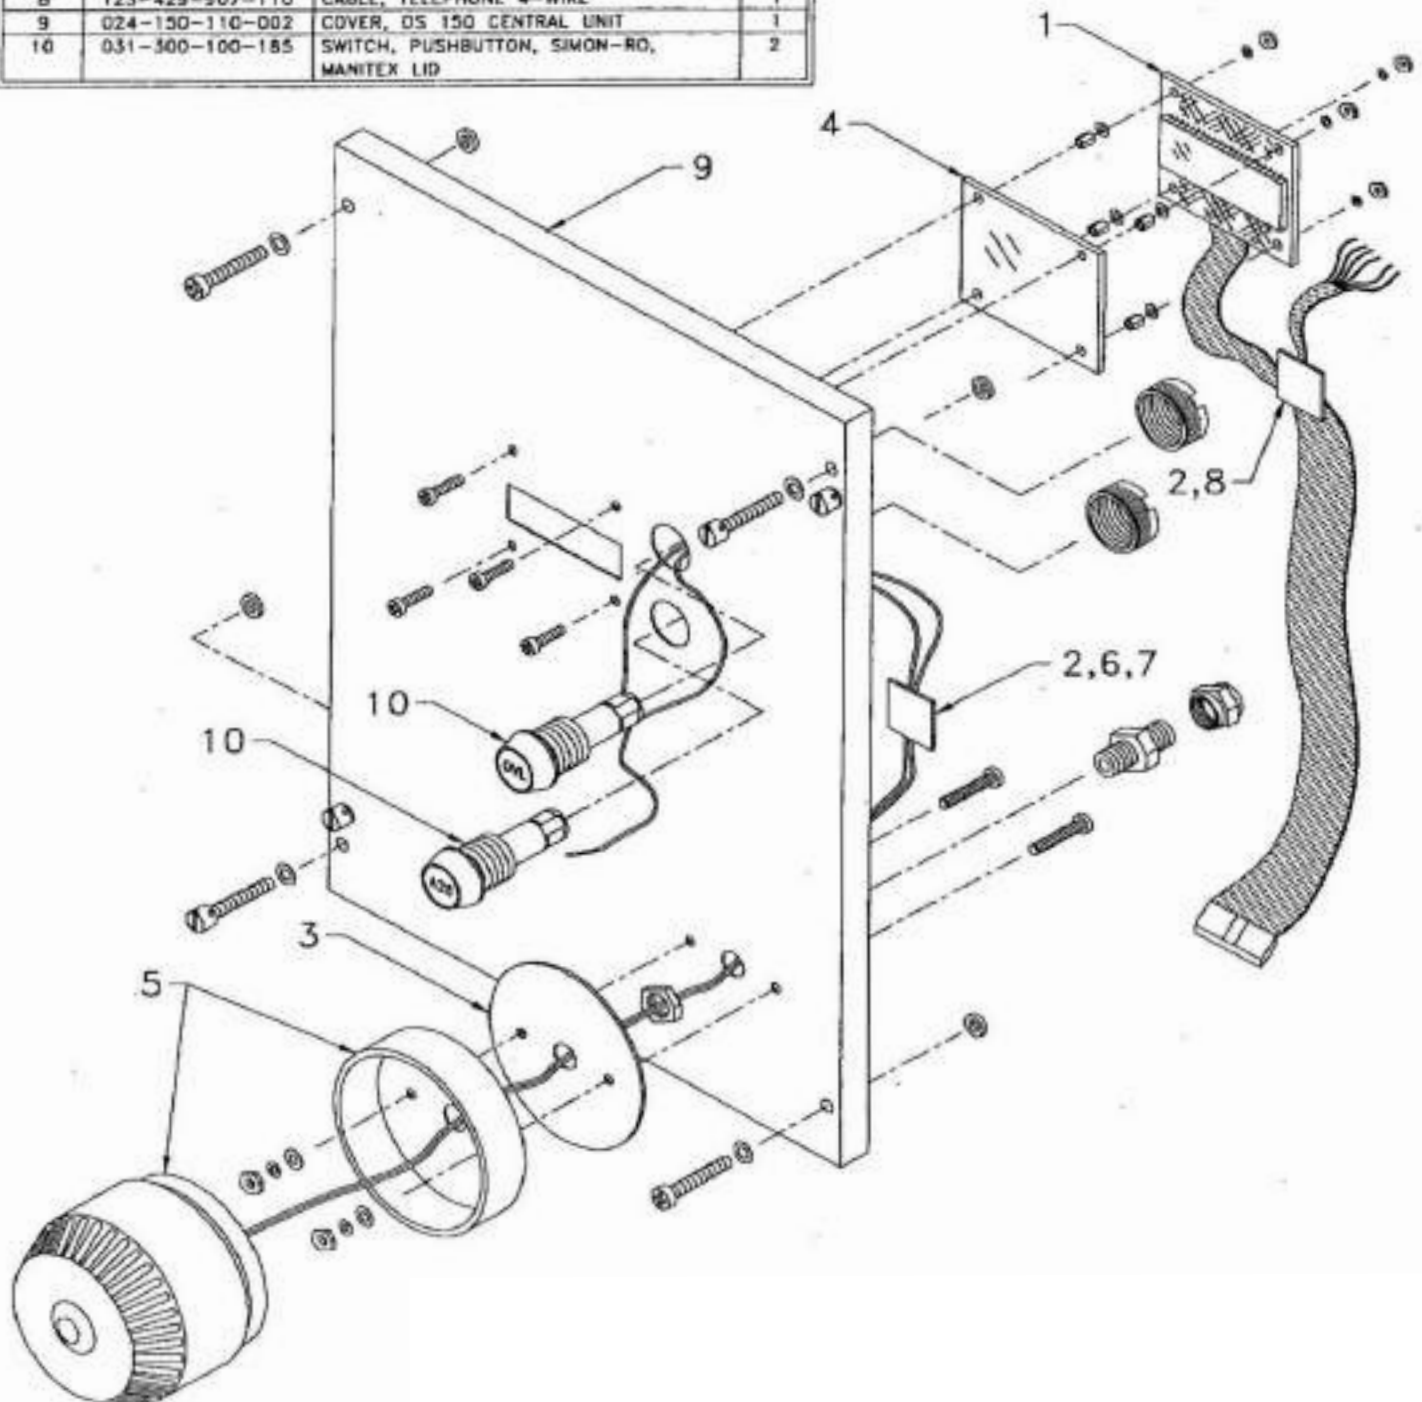

Central Unit Board Layout And Measuring Points 024-150-300-001

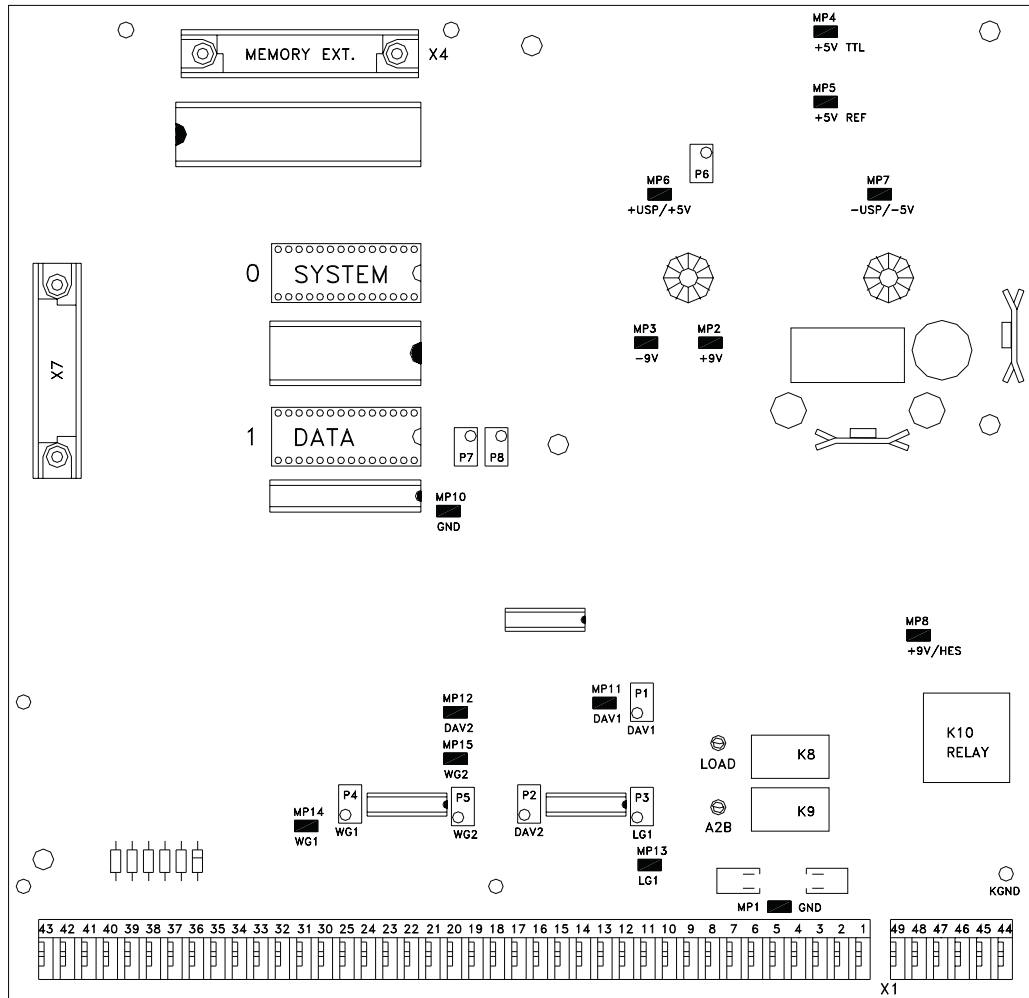

Measuring Points

- MP1: AGND
- MP2: +9V
- MP3: -9V
- MP4: 5V TTL
- MP5: 5V REF
- MP6: +5V/+UPS sensors supply
- MP7: -5V/-UPS sensors supply
- MP8: +9V HES
- MP10: AGND
- MP11: DAV1 piston pressure signal
- MP12: DAV2 rod pressure signal
- MP13: LW1 length signal
- MP14: WG1 angle signal #1
- MP15: WG2 angle signal #2

LED's

- LOAD: Overload relay ON(energized/normal conditions)/OFF (de-energized)
- A2B: A2B relay ON(energized/normal conditions)/OFF (de-energized)

Main Board Replacement

Refer to Drawing 1, central unit parts list for board location.

1. Turn system power off.
2. Remove the central unit lid.

NOTE: Take care not to damage the boards with the screwdriver, when removing and inserting screws.

3. Remove the system and data software from the main board.
4. Remove the relay from the main board.
5. Mark all connection wires before removing, to identify location for reconnecting. Disconnect all X1 terminal wires from the main.
6. Remove the 9 large Philips screws holding the main board in place.
7. Note the orientation of the main board in the central unit. Remove main board and place it in the same packing material that the replacement in which the main board came.
8. Carefully insert the new main board in place.
9. Insert the 9 Philips mounting screws.
10. Insert the relay into the main board.
11. Insert the system and data software into the main board.
12. Connect the X1 terminal wires to the main board. Refer to Wiring Diagram.
13. Zero pressure transducers using the zeroing procedure in this section.
14. Inspect the gasket for nicks, cuts, or damages. Refer to 031-300-340-003 DS 350 Central Unit Gasket Recommendations, Revision - and 031-300-340-002 Central Unit Cover Installation and Tightening Procedure, Revision A

PROCEDURE

EPROM replacement in Central Unit

Follow this procedure when changing EPROM's in the DS150 central units.

1. Remove cover, from central unit.

CAUTION: Before handling the EPROM, discharge any static electricity from your body by touching a ground source. The EPROM could be damaged if this procedure is not followed.

Use the central unit main board layout and measuring point drawing to locate the system and data EPROM's.

2. Remove the old EPROM from the main board using an EPROM puller. Be careful not to bend the legs of the EPROM when removing it.

3. Installing the new EPROM:

- Ensure the notch is in the correct direction. The direction of the EPROM is determined by the notch on the end of the EPROM.
- The DATA and TLK EPROM's fill the bottom of the socket as shown by the arrows.
- Place EPROM in the correct EPROM socket as shown.

4. Inspect gasket and install cover using the following procedures to prevent any moisture from entering the central unit.

Reference material:

031-300-340-002 Central Unit Cover Installation and Tightening Procedure; Rev A.


031-300-340-003 Central Unit Gasket Recommendations; Rev -.

Piston & Rod Pressure Channel Zero Point Adjustment

Use the central unit main board layout and measuring point drawing to make the following adjustments.


1. Lower boom all the way down (no rest pressure) then disconnect hydraulic hose from the piston side pressure transducer.
2. Connect a digital voltmeter to main board
 - A) black (-) lead to mp10
 - B) red (+) lead to mp11
3. Adjust P1 to obtain a reading of 0.500 volts (500mv) on meter.
4. Disconnect hydraulic hose from the rod side pressure transducer.
5. Connect a digital voltmeter to main board
 - A) BLACK (-) lead to MP10
 - B) RED (+) lead to MP12
6. Adjust P2 to obtain a reading of 0.500 volts (500mv) on meter.
7. Reconnect hydraulic hoses to pressure transducers, and then bleed the air from hydraulic lines.

Length & Angle Adjustments

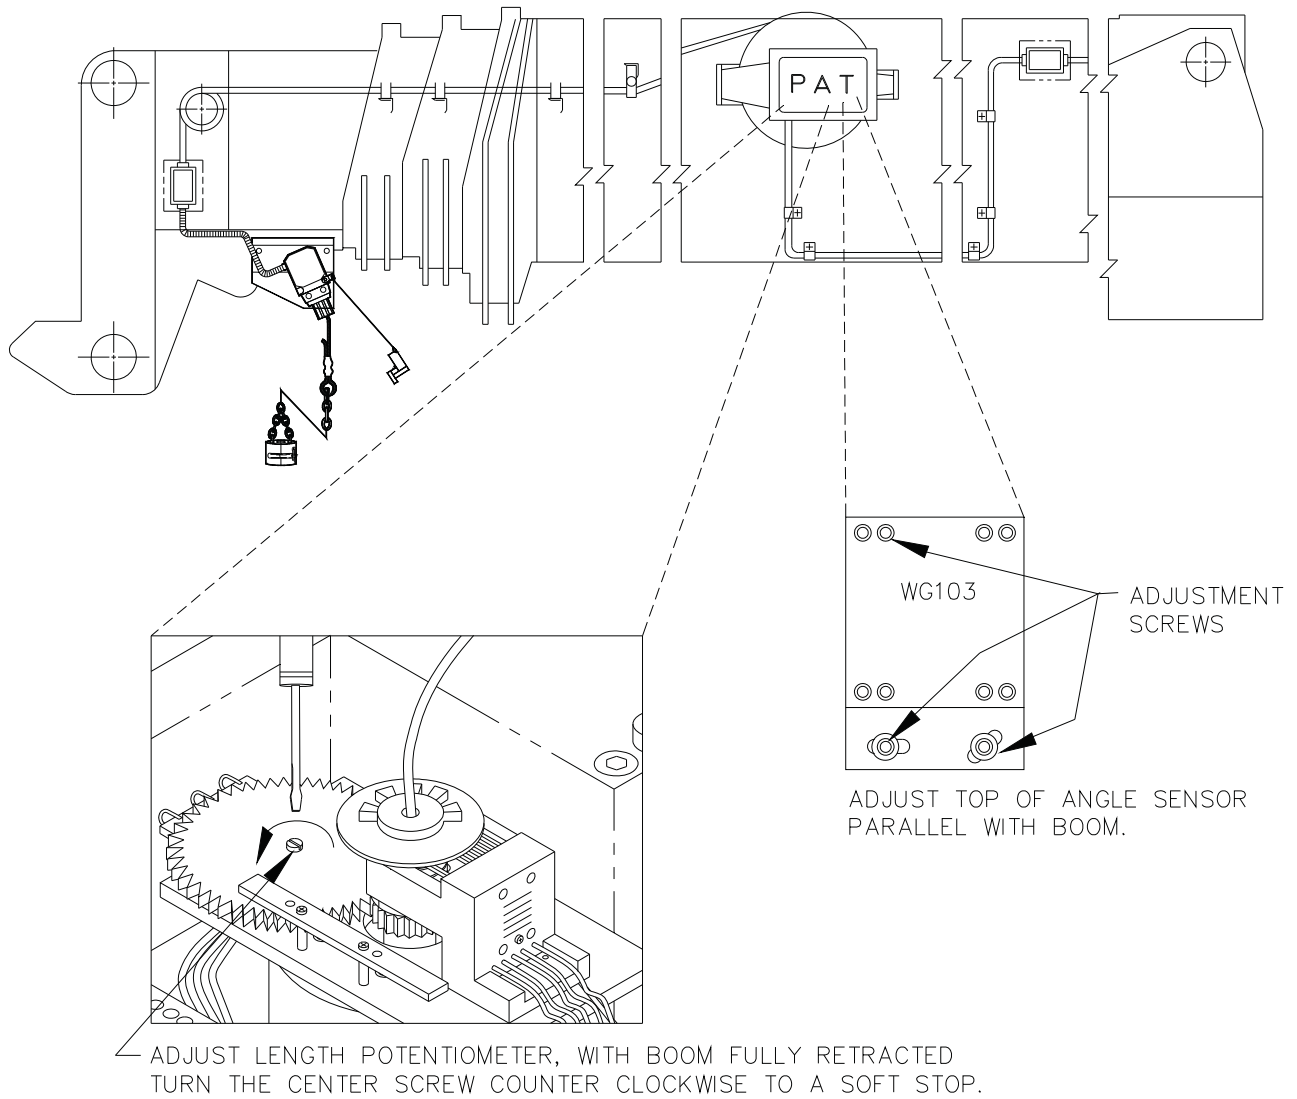


THEORY


Anti-Two Block & Shutoff Circuit

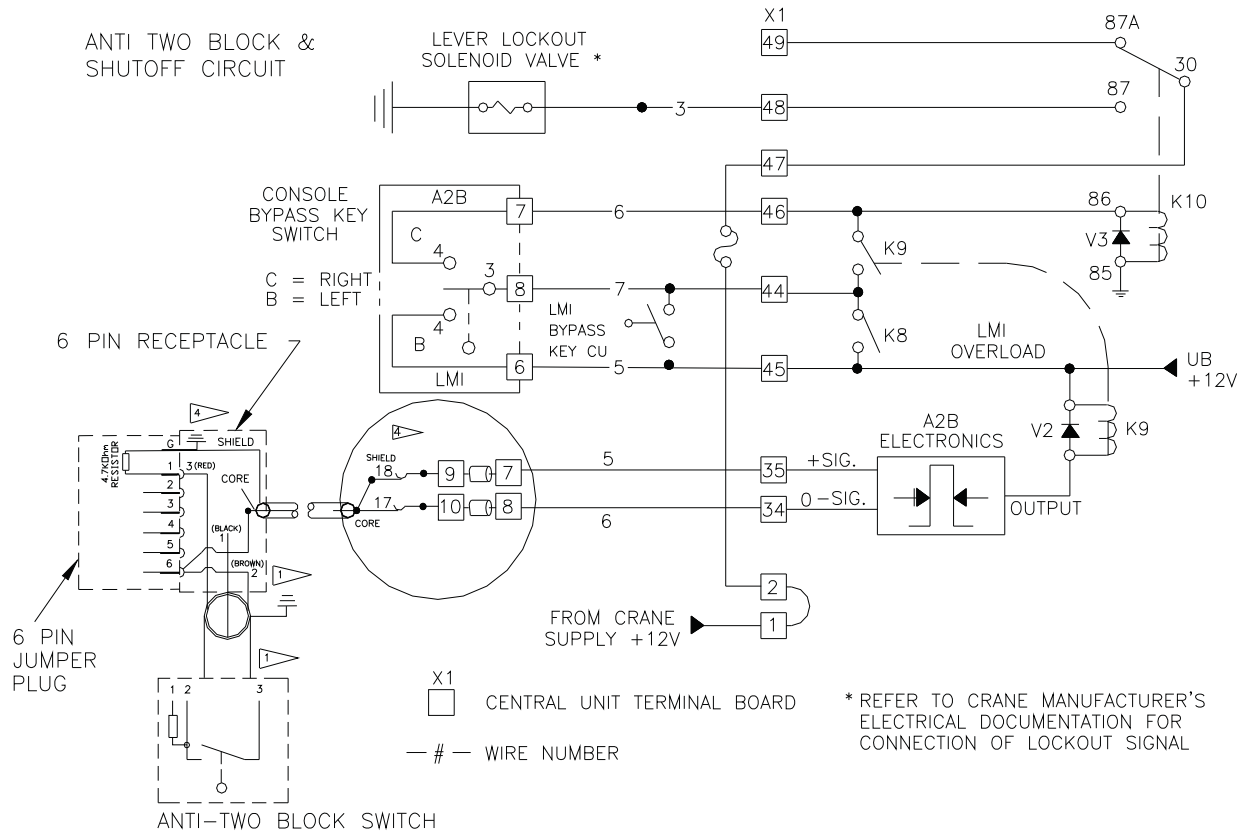


6.2 Length Measuring Channel

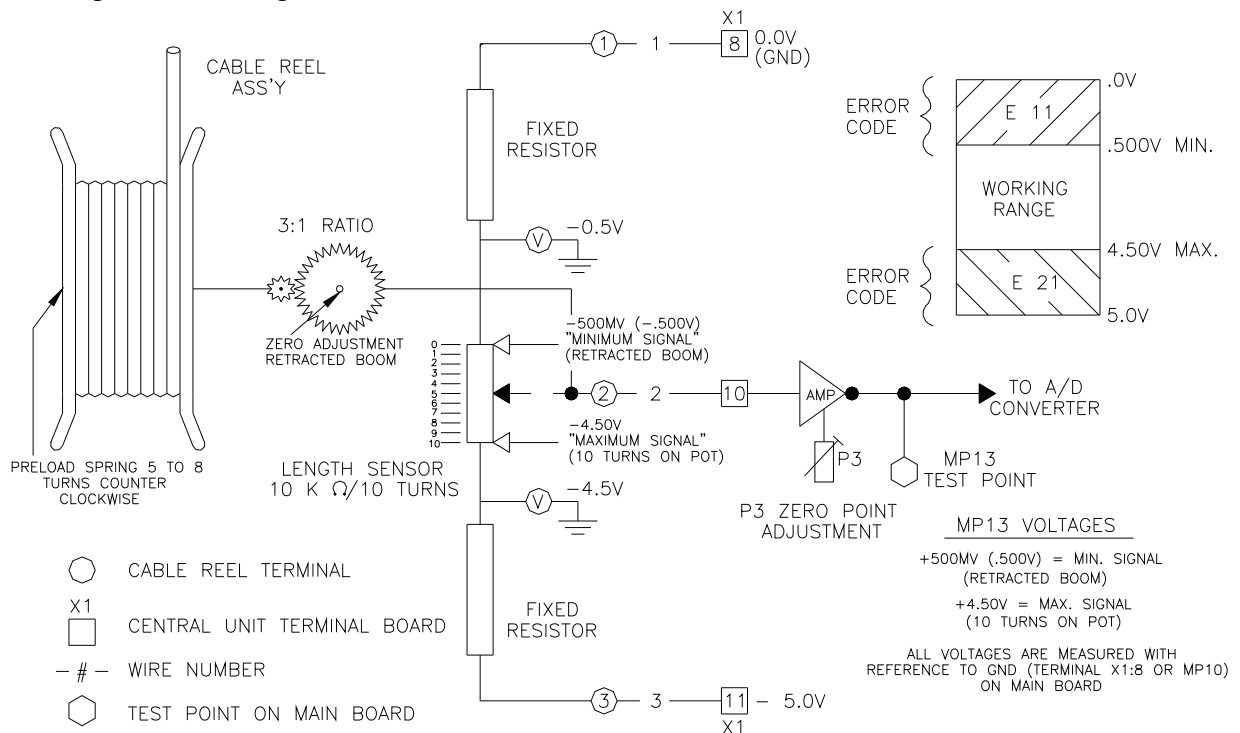


Piston Side Pressure Measuring Channel

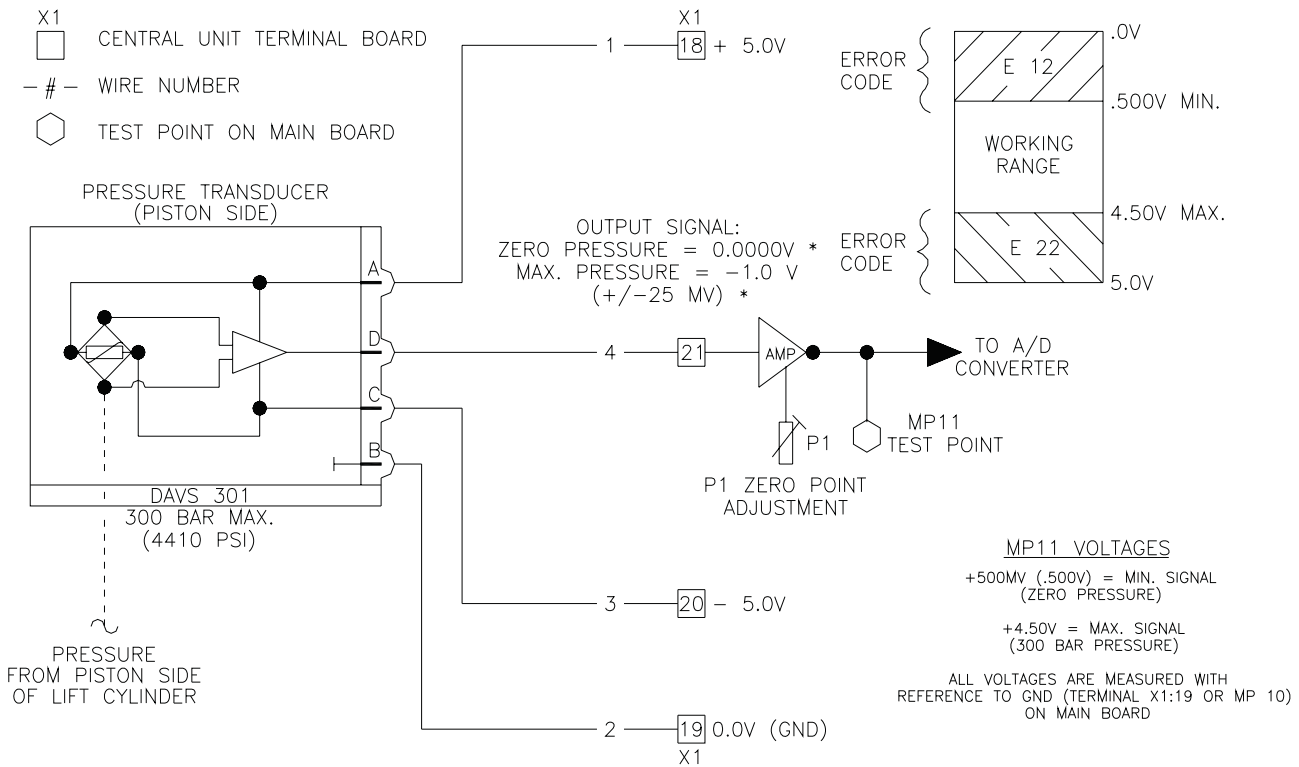


Rod Side Pressure Measuring Channel

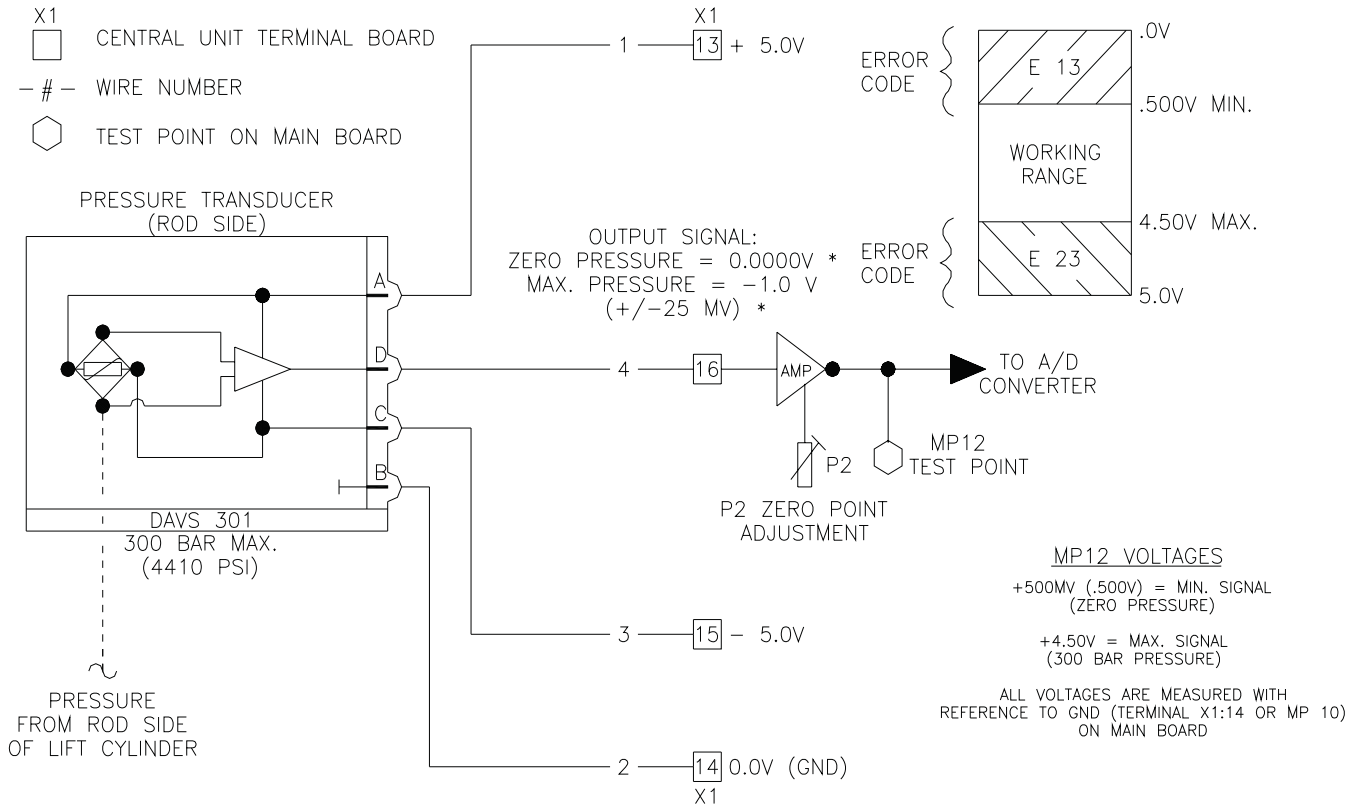


Main Boom Angle Measuring Channel

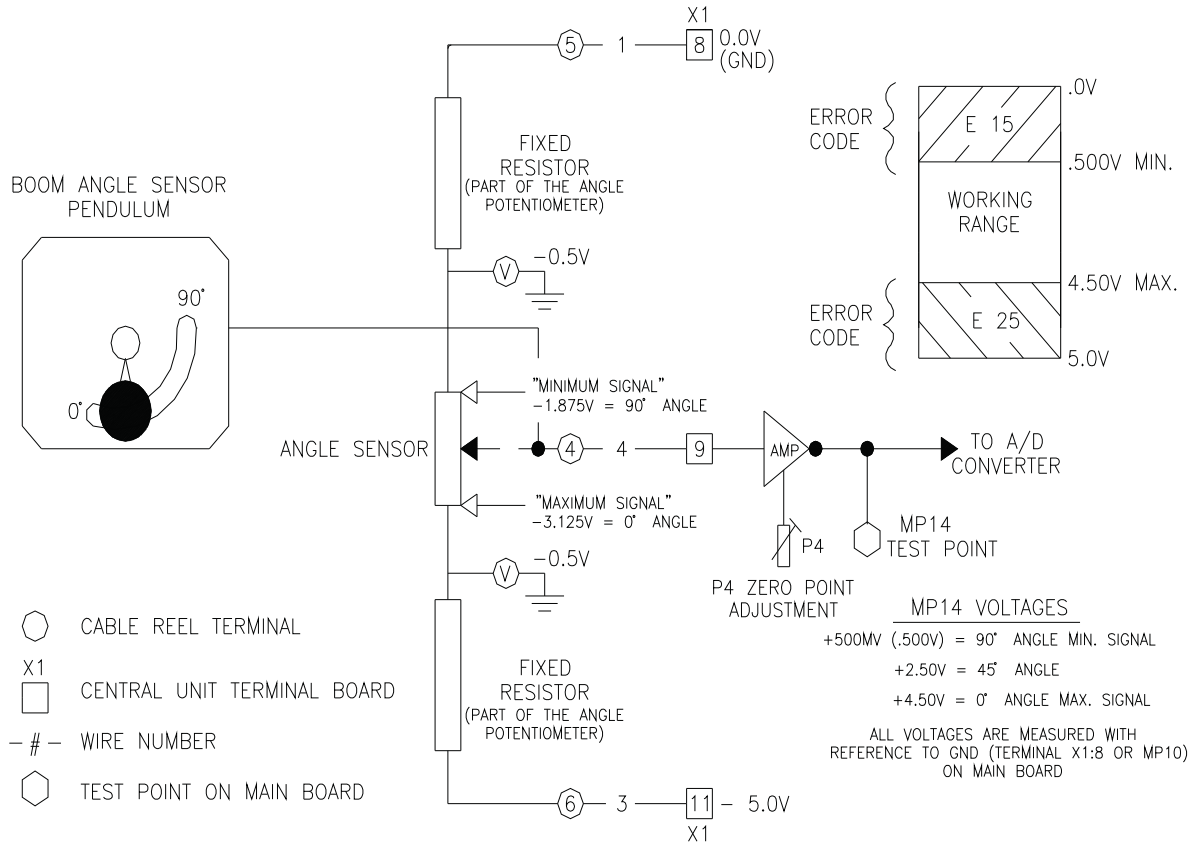

Second Angle Measuring Channel

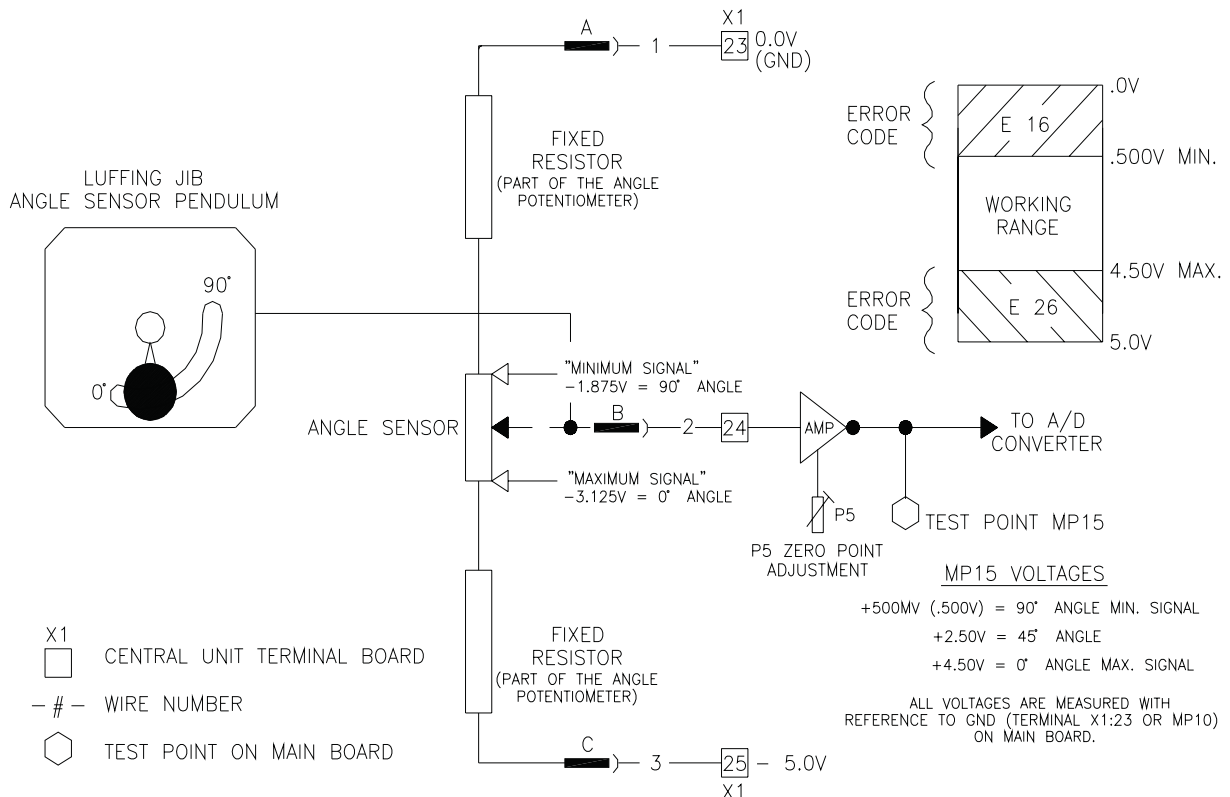

PACH DIESE ZEICHNUNG BEHALTEN SIE UND ALLE KOPFEN VON IHNEN UNTERNEHMEN ZURÜCKGEBEN. FÜR DIE WEITER VERWENDUNG DIESER ZEICHNUNG BEI ANDEREN ORTEN SIND EINGETRAGEN LIEFERUNG, ANFORDERUNG BEZUG NEHMEN UND SIE DAMIT BEWÄHREN, ES WIRD KEINE HAFTUNG FÜR DEN ANWENDER FÜR DEN EINSATZ DER ZEICHNUNG ANGEKÜNDIGT. ANDERE BEWEISUNG VON DIESER ZEICHNUNG FÜR ANDERE ZWECKE IST NUR MIT DER ERNEUTLICHEN ANWEISUNG DES ANWENDERS VERWÄHRUNG BEI DEN RECHTEN VON DER PATENTBEHÖRDE ERHALTEN WIRD. ANDERE BEWEISUNG IST NUR MIT DER ERNEUTLICHEN ANWEISUNG DES ANWENDERS VERWÄHRUNG BEI DEN RECHTEN VON DER PATENTBEHÖRDE ERHALTEN WIRD. ANDERE BEWEISUNG IST NUR MIT DER ERNEUTLICHEN ANWEISUNG DES ANWENDERS VERWÄHRUNG BEI DEN RECHTEN VON DER PATENTBEHÖRDE ERHALTEN WIRD.

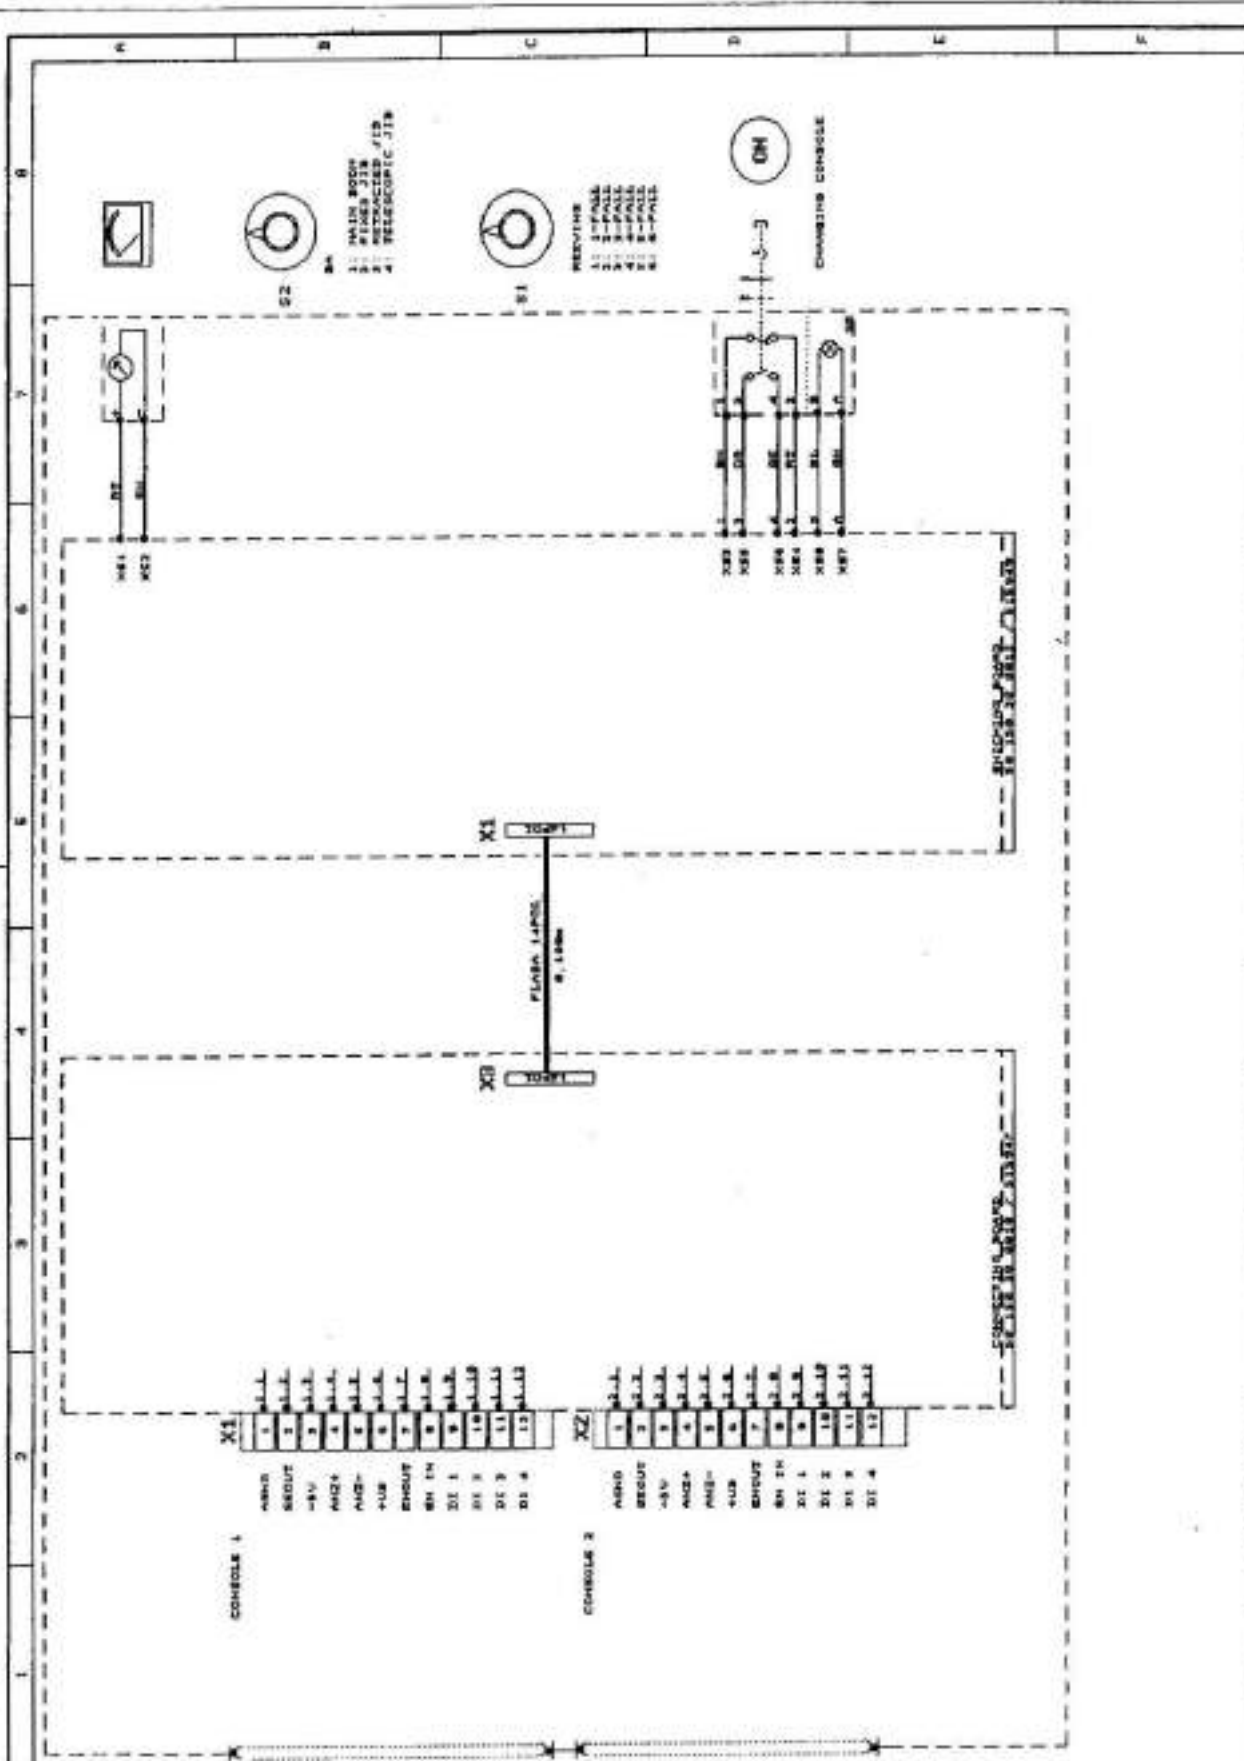

DATE 12.07.37
 DRAWN BY: [Name]
 DESIGNED BY: [Name]

PATENT BEHÖRDE
 VEREINIGTE
 ELECTRONIK
 58 808 86 8645


UTILIZATION INDICATOR
 WITH SELECTOR

50 000 31 0045 D

883333
 PLATE 81
 PAGES 22


58 808 86 8645

Für diese Zeichnung behalten wir uns alle Rechte vor. Ohne unsere vorherige Zustimmung darf sie weder vervielfältigt noch Dritten zugänglich gemacht werden, und sie darf durch den Empfänger oder Dritte auch nicht in anderer Weise missbräuchlich verwendet werden.

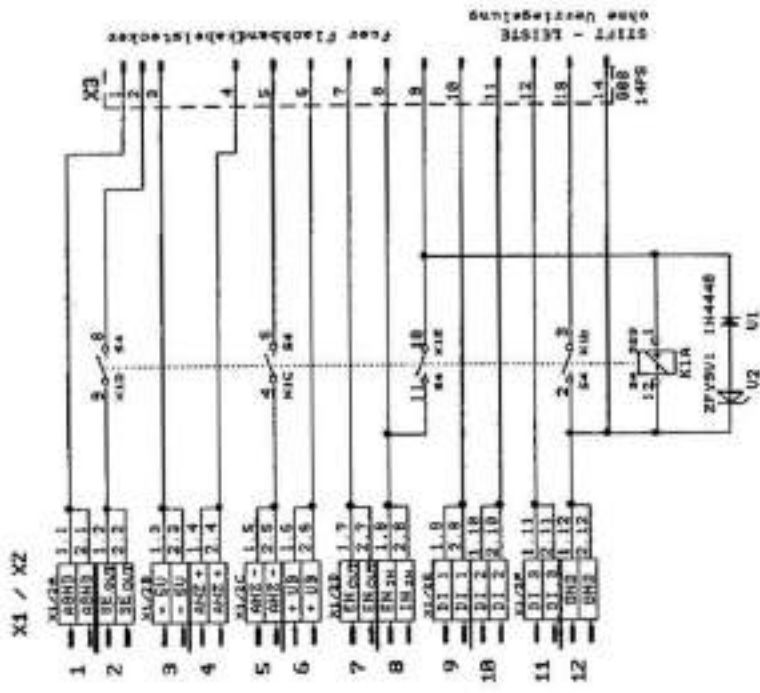

HAMITEX Konsole		HAMITEX Konsole	
Anschluss - Platine		Schalter - Platine	
1	5253	87.89.31	319
ARTIKEL	12.85.31	ARTIKEL	50 150 33 0010 E
BRAND	BRAND	BRAND	BRAND
HERSTELLER	HERSTELLER	HERSTELLER	HERSTELLER
MASSSTAB	MASSSTAB	MASSSTAB	MASSSTAB
BLATT	BLATT	BLATT	BLATT

Für diese Zeichnung behalten wir uns alle Rechte vor. Ohne unsere vorherige Zustimmung darf sie weder vervielfältigt noch Dritten zugänglich gemacht werden, und sie darf durch den Empfänger oder Dritte auch nicht in anderer Weise missbräuchlich verwendet werden.

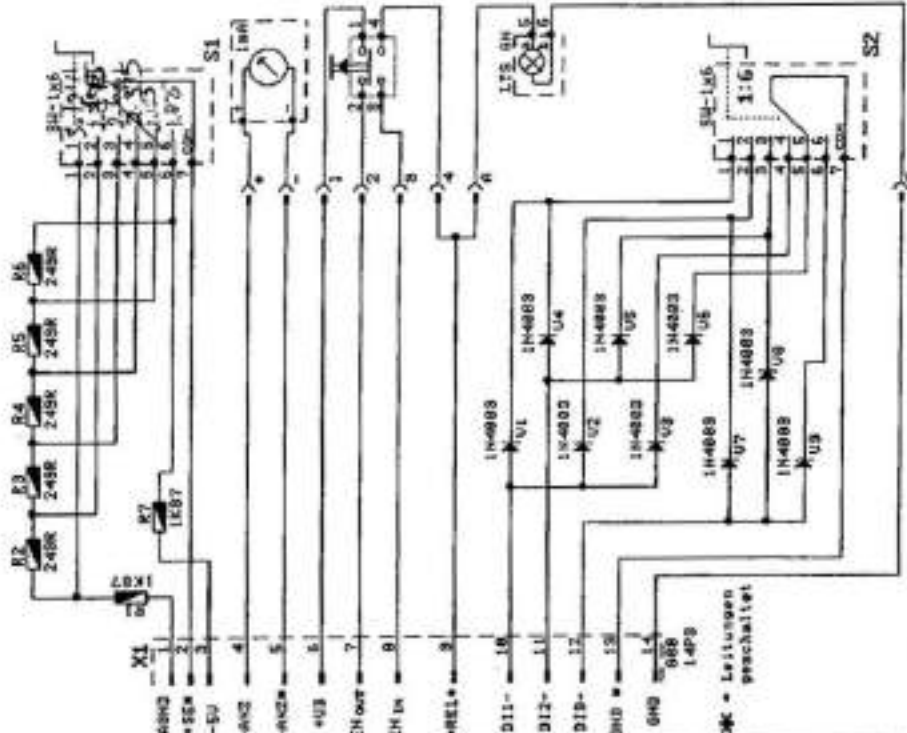

BA - Auswahl:

SZ:	D13	D12	D11
1	Box	Box	Box
2	Box	Box	Box
3	Box	Box	Box
4	Box	Box	Box
5	Box	Box	Box

HAMITEX Konsole		HAMITEX Konsole	
Schalter - Platine		Schalter - Platine	
1	5253	87.89.31	319
ARTIKEL	12.85.31	ARTIKEL	50 150 33 0011 E
BRAND	BRAND	BRAND	BRAND
HERSTELLER	HERSTELLER	HERSTELLER	HERSTELLER
MASSSTAB	MASSSTAB	MASSSTAB	MASSSTAB
BLATT	BLATT	BLATT	BLATT

ERROR CODE TABLE

Error Code	Error	Cause	Elimination
E01	Fallen below radius range or angle range exceeded	<ul style="list-style-type: none"> • Fallen below the minimum radius or gone past the maximum angle specified in the respective load chart due to luffing up the boom too far 	<ul style="list-style-type: none"> • Luff down the boom to a radius or angle specified in the load chart.
E02	Radius range exceeded or fallen below angle range	<ul style="list-style-type: none"> • Gone past the maximum radius or fallen below the minimum angle specified in the respective load chart due to luffing down the boom too far 	<ul style="list-style-type: none"> • Luff up the boom to a radius or angle specified in the load chart.
E03	Non-permitted slewing zone (no load area)	<ul style="list-style-type: none"> • The slewing zone with load is not permitted 	<ul style="list-style-type: none"> • Slew to permitted area
E04	Operating mode not acknowledged or non permitted slewing zone	<ul style="list-style-type: none"> • A non existing operating mode has been selected • The boom is in a non-permitted slewing zone 	<ul style="list-style-type: none"> • Set the correct operating mode for the operating state in question • Slew the boom to a permitted area.
E05	Prohibited length range	<ul style="list-style-type: none"> • Boom has been extended either too far or not far enough, e.g. if it is prohibited to go beyond a certain maximum boom length or with load curves for jibs where the main boom has to be extended to a certain length 	<ul style="list-style-type: none"> • Extend/retract boom to the correct length
		<ul style="list-style-type: none"> • Length sensor adjustment has changed, e.g. the cable slid off the length sensor reel. 	<ul style="list-style-type: none"> • Retract boom. Check the pre-stress of the cable reel (cable must be taut). Open the length sensor and carefully turn the length sensor pot counter clockwise until loosened by using a screw driver

Error Code	Error	Cause	Elimination
		<ul style="list-style-type: none"> • Clutch between length sensor pot and drive is defective • Failure of +5V supply of analog part of analog board • Cable between central unit and length sensor is defective or disconnected. • Defective length potentiometer 	<ul style="list-style-type: none"> • Replace the complete clutch including drive wheel and adjust length sensor pot as described above • Check +5 V supply. Exchange main board in case of voltage failure or breakdown when loaded with 50 ohms approx. • Check cable and plugs, replace, if need be. • Replace length potentiometer.
E06	Radius range exceeded or fallen below angle range with luffing jib operation	<ul style="list-style-type: none"> • Maximum radius as specified in the load chart exceeded or fallen below minimum angle due to luffing down the luffing jib too far 	<ul style="list-style-type: none"> • Luff the jib to a radius or angle specified in the load chart.
E07	Faulty acknowledgment of the overload relay on the main board. The relay should be energized, the 2nd contact however is indicated to be off, or the 2nd contact is indicated to be on while the relay should be de-energized.	<ul style="list-style-type: none"> • Overload relay or main board are defective • Processor board defective 	<ul style="list-style-type: none"> • Replace main board • Replace processor board.
E08	No acknowledgment from the anti-two-block relay	<ul style="list-style-type: none"> • Refer to E07 	<ul style="list-style-type: none"> • Refer to E07

Error Code	Error	Cause	Elimination
E11	Fallen below lower limit value for measuring channel "length main boom"	<ul style="list-style-type: none"> • Cable between central unit and length sensor is defective or disconnected. Water inside the plug of the length/angle sensor • Length potentiometer is defective • Electronic component in the measuring channel is defective 	<ul style="list-style-type: none"> • Check cable as well as plugs, replace, if need be. • Replace length potentiometer • Replace LMI main board or processor board.
E12	Fallen below the lower limit value in the measuring channel "pressure piston side"	<ul style="list-style-type: none"> • Cable between the central unit and pressure transducers defective or water inside the plugs • Pressure transducer is defective. • Electronic component in the measuring channel is defective. 	<ul style="list-style-type: none"> • Check cable as well as plugs, replace, if need be. • Replace pressure transducer • Replace LMI main board or processor board.
E13	Fallen below lower limit value in the measuring channel "pressure rod side"	<ul style="list-style-type: none"> • Refer to E12 	<ul style="list-style-type: none"> • Refer to E12
E15	Fallen below lower limit value in measuring channel "angle main boom"	<ul style="list-style-type: none"> • Cable between central unit and the length/angle sensor defective or loose. Water inside the plug of the length/angle sensor. • Angle potentiometer defective • Electronic component in the measuring channel defective. 	<ul style="list-style-type: none"> • Check cable as well as plugs, replace, if need be. • Replace angle sensor • Replace LMI main board or processor board.
E16	Fallen below lower limit value in measuring channel "angle 2"	<ul style="list-style-type: none"> • Cable between the central unit and the angle sensor defective or loose. Water inside the plug of the angle sensor. • Angle potentiometer defective • Electronic component in the measuring channel defective. 	<ul style="list-style-type: none"> • Check cable as well as plugs, replace, if need be. • Replace angle sensor • Replace LMI main board or processor board.

Error Code	Error	Cause	Elimination
E19	Reference and/or supply voltage defective	<ul style="list-style-type: none"> • The supply voltage is falsified by one of the sensors (DAV, LWG) • Electronic component is defective 	<ul style="list-style-type: none"> • Check the voltages on the LMI main board. Check sensors, plugs and cable, replace, if need be. • Replace LMI main board
E20	Analog and/or supply voltage defective	<ul style="list-style-type: none"> • The analog voltage is falsified by one of the sensors • Electronic component is defective 	<ul style="list-style-type: none"> • Check the voltages on the LMI main board. Check sensors, plugs and cable, replace, if need be. • Replace LMI main board
E21	Upper limit value in measuring channel "main boom length" has been exceeded.	<ul style="list-style-type: none"> • Refer to E11 	<ul style="list-style-type: none"> • Refer to E11
E22	Upper limit value in measuring channel "pressure piston side" has been exceeded	<ul style="list-style-type: none"> • Refer to E12 	<ul style="list-style-type: none"> • Refer to E12
E23	Upper limit value in measuring channel "pressure rod side" has been exceeded.	<ul style="list-style-type: none"> • Refer to E12 	<ul style="list-style-type: none"> • Refer to E12
E25	Upper limit value in measuring channel "main boom angle" has been exceeded.	<ul style="list-style-type: none"> • Refer to E15 	<ul style="list-style-type: none"> • Refer to E15
E26	Upper limit value in measuring channel "angle 2" has been exceeded.	<ul style="list-style-type: none"> • Refer to E16 	<ul style="list-style-type: none"> • Refer to E16
E29	Reference and/or supply voltage defective.	<ul style="list-style-type: none"> • Refer to E19 	<ul style="list-style-type: none"> • Refer to E19
E31 E37	Error in the system program	<ul style="list-style-type: none"> • The system program PROM is defective. 	<ul style="list-style-type: none"> • Replace system program PROM (PROM No. 0)
E38	System program and data EPROM do not match.	<ul style="list-style-type: none"> • The system program in the LMI does not match to the programming in the data EPROM 	<ul style="list-style-type: none"> • Replace the system program PROM or the data EPROM (PROM No. 1)

Error Code	Error	Cause	Elimination
E41	Error in the internal write/read memory (RAM) of the computer component 80C537	<ul style="list-style-type: none"> • Computer component 80C537 defective • CPU module defective • Processor board defective. 	<ul style="list-style-type: none"> • Replace computer component 80C537. • Replace CPU module. • Replace processor board with CPU module.
E42	Error in the external write/read memory, 1st part (RAM)	<ul style="list-style-type: none"> • Write/read memory (CMOS RAM) or processor board defective. 	<ul style="list-style-type: none"> • Replace processor board with CPU module.
E43	Error in the external write/read memory, 2nd part (RAM)	<ul style="list-style-type: none"> • Refer to E42 	<ul style="list-style-type: none"> • Refer to E42
E45	Redundancy error in the A/D conversion	<ul style="list-style-type: none"> • The A/D converter on the processing board and the redundant A/D converter in the CPU 80C537 provide different results. 	<ul style="list-style-type: none"> • Replace processor board.
E46	Error in the A/D converter uPD 7004 of the processor board.	<ul style="list-style-type: none"> • No acknowledgment of the A/D converter uPD 7004 	<ul style="list-style-type: none"> • Replace processor board.
E48 E49	Cyclic RAM test: error in the internal write/read memory (RAM) of the computer component 80C537	<ul style="list-style-type: none"> • Computer component 80C537 defective • CPU module defective • Processor board defective. 	<ul style="list-style-type: none"> • Replace computer component 80C537. • Replace CPU module • Replace processor board with CPU module.
E51	Error in the crane data EPROM or EEPROM.	<ul style="list-style-type: none"> • No valid data in the crane data EEPROM. • Memory module wrongly bridged. • Crane data EPROM defective 	<ul style="list-style-type: none"> • Load crane data EEPROM containing valid data. • Bridge memory module acc. to memory type • Replace crane data EPROM
E80	Short circuit in the Anti-two Block (A2B) switch.	<ul style="list-style-type: none"> • Short circuit in the A2B switch • Short circuit in the cable to the A2B switch 	<ul style="list-style-type: none"> • Replace A2B switch • Replace cable to the A2B switch

Error Code	Error	Cause	Elimination
E91	No data transmission from the console to the central unit	<ul style="list-style-type: none"> • 24 V supply of the console is interrupted • Interruption or accidental ground in the line between console electronics and central unit • Transmitter/receiver module is defective 	<ul style="list-style-type: none"> • Check 24 V at terminal X1 of the console electronics • Check the main console electronics - central unit. In case of an accidental ground, the transmitter module of the console electronics might be damaged. Therefore, replaces the console electronics. • Exchange console electronics or LMI main board
E92	Error in the data transmission from console to central unit	<ul style="list-style-type: none"> • Loose connection in the line between console electronics and central unit • Transmitter/receiver module is defective 	<ul style="list-style-type: none"> • Check the connection between console electronics and central unit • Exchange console electronics or LMI main board
E93	Error in the data transmission from the central unit to the console	<ul style="list-style-type: none"> • Refer to E92 	<ul style="list-style-type: none"> • Refer to E92
E94	No data transmission from the central unit to the console	<ul style="list-style-type: none"> • Interruption or accidental ground in the line central unit - console • 5 V supply of the computer in the central unit is missing • 5 V supply is too low • Transmitter/receiver module is defective • Computer module is defective • Electro-magnetic interferences (e.g. when switching contacts or valves) 	<ul style="list-style-type: none"> • Check line to the console (in case of accidental ground, replace console electronics, too). • Check connection to the power unit • Exchange the LMI main board • Replace console electronics or LMI main board • Replace processor board. • Eliminate the source of interference by inverse diodes or varistors.

Note: If an error message is displayed which is not contained in above list, please contact PAT America, Inc. service department.

ADDENDUM A BASIC ADJUSTMENT AND VOLTAGE CHECKS

MODEL: _____

S/N: _____

PAT DS150 P/N 024-150-060-002 central unit / 024-150-300-001 main board

1. Crane Supply Voltage @ X1-1 (+) & X1-4 (GND) = VDC
2. Main Board Power Supply (Reference Voltages +/- 50 MV):
 - + 9V @ Mp2 = _____ VDC Mp 10 Ground - Piston & Rod Pressure
 - 9V @ Mp3 = _____ VDC Mp 10 Ground - Piston & Rod Pressure
 - 5V @ Mp4 = _____ VDC Mp 10 Ground – TTL on Board
 - 5V @ Mp5 = _____ VDC Mp 10 Ground – Reference on Board
 - + 5V @ Mp6 = _____ VDC Mp 10 Ground – Internal on Board
 - 5V @ Mp7 = _____ VDC Mp 10 Ground – Length and Main/Jib Angle
4. Boom Length: (MP10 Ground for Meter)
 - Fully Retracted _____ Ft. _____ VDC @ X1:10 _____ DC @ MP13
 - Fully Extended _____ Ft. _____ VDC @ X1:10 _____ DC @ MP13
 - 5 Volt Reference Voltage _____ VDC @ X1:11
5. Boom Angle: (MP10 Ground for Meter)
 - Minimum Angle _____ ° _____ VDC @ X1:9 _____ VDC @ Mp14
 - Maximum Angle _____ ° _____ VDC @ X1:9 _____ VDC @ Mp14
 - 5 Volt Reference Voltage _____ VDC @ X1:11
6. Pressure Transducers: (MP10 Ground for Meter)
 - Piston Zero Point _____ VDC @ X1:21 _____ VDC @ Mp11
 - Rod Zero Point _____ VDC @ X1:16 _____ VDC @ Mp12
 - +5 Volt Reference Voltage _____ VDC @ X1:13 & 18
 - 5 Volt Reference Voltage _____ VDC @ X1:15 & 20



www.skyazul.com

SkyAzul, Inc.
16 Walnut Street
Middletown, MD 21769
Phone 301-371-6126
Fax 301-371-0029
info@skyazul.com